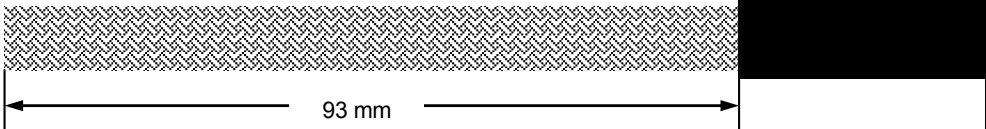
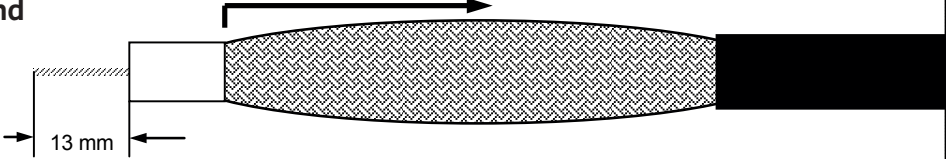



# Mounting Instruction


## Plug F3430 + Cable RG11


- 1** Remove the cable sheath



- 2** Push back the braided shield and strip the isolation from the center conductor


- 3** Push back the screen to the front and twist it together on the front end


- 4** Put the rear screw and the collet on the cable


- 5** Push back the braided shield and cut it along the outside of the taper washer

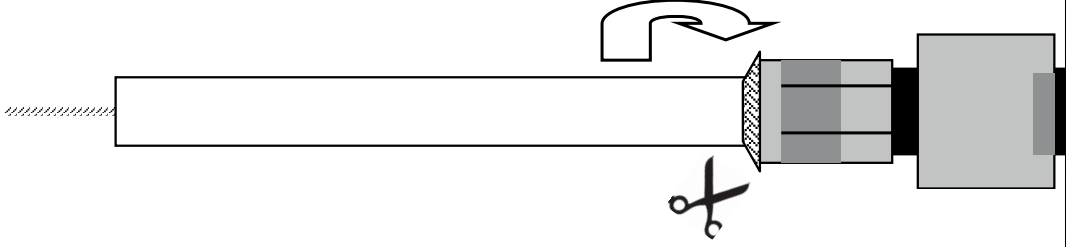
- 6** Put on the isolation sleeve and the connector case and screw them together

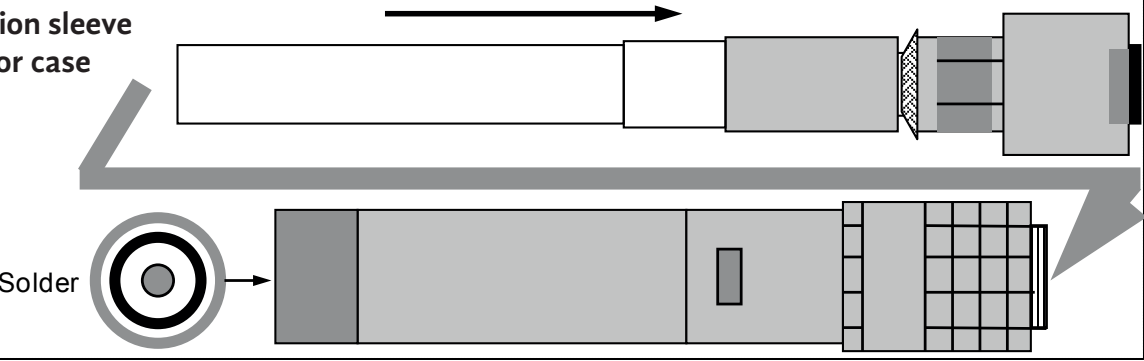
- 7** Solder the cable center conductor